

## **DBHB** Disposable Curtain System





1. No need to fit gliders individually - simply push disposable curtains onto the rail as single blocks.



2. The removal of the polythene packaging after hanging, maximises curtain hygiene.



3. A completion of date label allows scheduling of next curtain change.



4. To change the curtains, simply unlock the end stop.



**5.** Then remove the curtains from the track.



### Our Simple Solution.

DBHB Disposable curtains are the efficient, hygienic alternative to traditional cubicle curtains and are designed to fit a wide range of existing tracks.



### Your Existing Tracks...



Marlux









### Our Simple Solution.

No need to fit individual gliders - push the disposable curtains on to the rail as grouped blocks and unlock the curtains with the recyclable key.

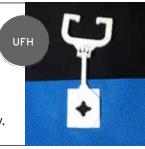



Eyelet Hooks



EasiClick



SFH (Small Fixed Hooks)



UFH (U Shaped Fixed Hooks)



EasiClick 2



LFH (Large Fixed Hooks)

## **DBHB** Disposable Curtain System





### **Application**

DBHB Disposable Curtains are the quick, efficient and hygienic alternative to traditional cubicle curtains. Designed to fit the vast majority of existing tracks, this robust product is easy to fit, easy to change and easy to pull round whilst offering higher privacy levels than most conventional curtains.

The curtains are extremely resilient and can remain hanging for a year or more, however, we would recommend that each hospital/site carries out its own assessment to set the frequency at which the curtains should be changed in different areas.

DBHB Disposables are now installed in various sites throughout the UK and have, along with other infection control procedures, significantly reduced healthcare-associated infections (HAI's).

### **Cost Comparison**

DBHB Disposable Curtains provide a cost effective solution to the management of hospital curtains.

- No curtain laundry costs
- No capital outlay for curtains
- No disruption to ward areas during changing
- Next Day Delivery on stock items
- Time saving on changeovers

### Fire Retardant

DBHB Disposable Curtains comply with the same fire retardancy standards as conventional curtains, BS5867 Part 2 Type C. We rigorously test each batch supplied and copies of test certificates are available on request.

### Colours

DBHB Disposable Curtains come in a range of standard colours and we have introduced a patterned range for those looking for a less clinical appearance whilst still maintaining all of the benefits associated with disposable curtains.

### Installation

DBHB Disposable Curtains are available with six different hook options which will fit existing tracks avoiding the need for unnecessary and expensive track alterations.

Hanging DBHB Disposable Curtains could not be simpler and in comparison to conventional fabric curtains this can be carried out by a single person within a few minutes.

## **DBHB** Disposable Curtain System





### Your questions answered...

## Q: How often do the curtains need to be changed?

The curtains are durable and can stay hanging for a year or more, however we would recommend that each hospital carries out its own assessment to set the frequency.

Each curtain has a self audit label so that you can easily see when it was last changed and can be included within existing infection control procedures.

### Q: Does the fabric support bacterial growth?

No, the curtains are manufactured from a durable, disposable and completely recyclable polypropylene fabric which inhibits bacteria growth.

## Q: Do disposable curtains offer the same privacy as conventional curtains?

Privacy for patients is actually enhanced using disposable curtains when compared to most conventional fabrics.

#### Q: What colours are available?

The curtains are available from stock in the following colours:

- Royal Blue
- Silver Grey
- Woodland Green
- French Clay

Bespoke colours are also available, subject to quantities.

### Q: Are the curtains available in varying width?

Sizes of curtains are available:

- 375cm width 12 per box
- 750cm width 6 per box

### Q: How are the curtains labelled?

Details of the date that the curtains have been fitted, the fire retardancy and the re-order code are clearly visible to allow simple auditing procedures to be applied.

## Q: Are the curtains made from environmentally friendly fabric?

Yes, DBHB Disposable Curtains are made from 100% polypropylene which has one of the lowest environmental impacts of any material, synthetic or traditional.

### Q: Do you supply shower curtains?

Yes, shower curtains are supplied in boxes of 10, in either cream or white. Fixed size of 200cm wide.



# HBC4100 hand-drawn

for light, medium and heavy-weight curtains





## Your curtain rails in our care

For many years now, DBHB rails have set the standard in healthcare applications. DBHB owes that status to its excellent range of quality systems combined with custom solutions and dedicated project management.

### Full Program

Our product range for healthcare includes cubicle rail, shower rail, window rail and picture rail. This diversity allows for the assembly of complete rail packages, catering to all interiors. Cubicle rail can be provided with accessories (i.e. IV-hook, curtain holders etc.) and can be installed fully insulated against electrostatic risks. Furthermore, it is possible to equip the rail with an LRS (Load Release System), an option developed for healthcare environments with heightened risks of strangulation.

### Tailored Solutions

Bespoke products are our forte. If needed, rails are curved by specialists using dedicated DBHB bending equipment, ensuring smooth-running rail systems crafted from a single section of rail.

Naturally, cubicle rails can also be motorised by selecting our 6200 profile. During the early stages of a project, our technicians can take into account specific requests, such as the requirement to integrate a patient hoist.


#### From A to Z

DBHB gathered lots of expertise and years of experience under one roof. It's your guarantee for high quality of communication, advice, products and services. We manage both new build projects and rennovations. Our systems are compatible with most of building management and home automation systems.

- Specialised in made-to-measure solutions
- Full program
- Dedicated craftsmanship
- All expertise under one roof
- Full range of rails and accessories
- LRS option

## World's best bendable motorised rail systems. Specialist in made-to-measure solutions.



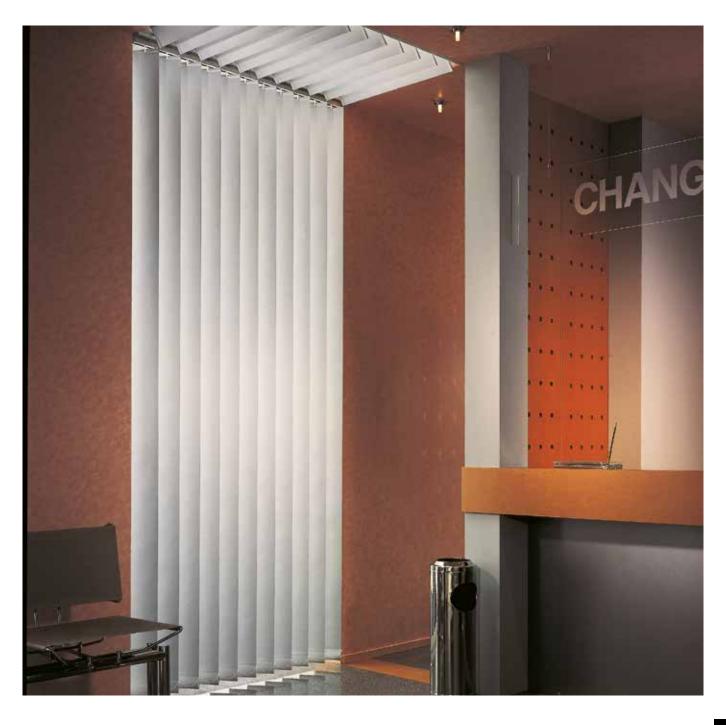



## **HBC4100**

### hand-drawn strong & slim-looking

The DBHB HBC4100 profile is the strongest rail in our assortment. Its slim and sleek industrial look makes it fit for many interiors. It can be easily mounted in various ways on a wall, ceiling or hanging free. A very popular track that can be used in a wide variety of situations, such as private homes, but also in office buildings and in the care sector.

- The ideal track for lightweight, medium-heavy or heavy curtains.
- Easy to bend and exceptional quality.
- Can be forward or reverse bent in different radii.
- Silent and smooth running, also round bends.
- Compatible with LRS gliders.



### Standard colours







High quality, wear-resistant coating, highly colourfast, UV-resistant. Other RAL colours and special coatings on request.

### **Features**


Material: aluminium


**Colour:** white, natural anodised, black

Dimensions: 34 x 15 mm
Weight profile: 405 gr/m1
Mounting: wall or ceiling

## Profile Specifications

### Aluminium profile:





	RAL	4	5	6	7
White	9010		•	•	•
Natural			•	•	•
Black	9005			•	

### Mounting surface:

- wood
- masonry/concrete

### Bracket type:


- ceiling bracket
- wall bracket
- spacer bracket

### Bending:

Bending Radius	Bending Tool		
R 15cm	1015		
R 20cm	1015		
R 30cm	1015		
R>80cm	1018		
R 15cm	R>100cm		
	$\uparrow \qquad \qquad \uparrow$		




### Mounting

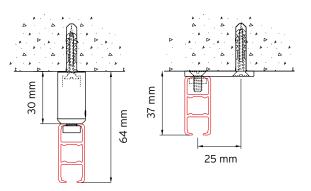


Ceiling mounting with mini suspension hanger

Ceiling mounting with fixing plate


### **Application Example**

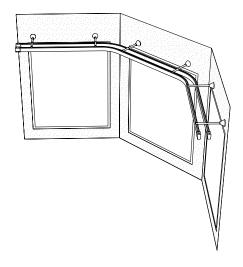



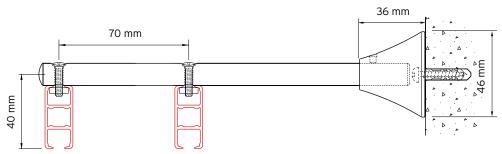


Mounting with adjustable extension bracket

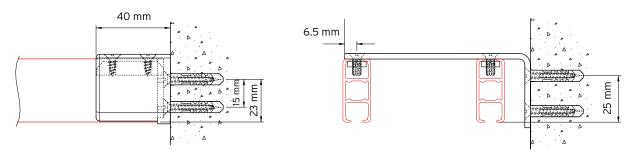

Wall mounting with end bracket

Mounting with extension bracket

### **Mounting Guideline**



The distance between the brackets can vary depending on the following factors: the mounting surface (wood, concrete or plaster), the weight of the curtains and the curtain fabric production method, the specific application and the system usage intensity. General advice: with the curtains open, place additional brackets where the pleats bunch together. Also place additional brackets before and after bends.

### **Specification Guide**

### Material

- Aluminium EN AW-6060-T66.
- Anodised in accordance with the Qualanod standard.
- Powder coated in accordance with the Qualicoat standard.



0333 0143 213 healthcare@designsbyhb.com www.designsbyhb.com